


## Handling instruction and Points to be considered

### 使用要領及注意事項

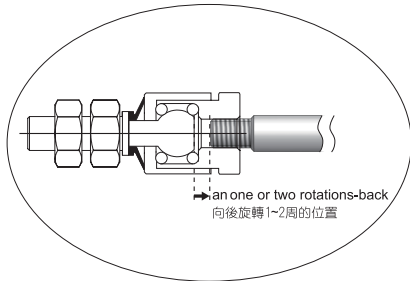

## Handling instruction and Points to be considered

- ① Cylinder joints be used for air cylinders only for other purposes.
- ② The stud on the cylinder joints can be rotated but is not a rotation knob and should not be used for this purpose.
- ③ The joints can not be used after disassembling.
- ④ The lubricant has been filled in the body.
- ⑤ The socket on the cylinder rod should not be inserted deeper than shown in this catalog. Proper socket location is an one or two rotations-back after the rod reaches the bottom.
- ⑥ Before installing the joint, clean out dust from the socket so that no dust can enter the female socket.

### 使用要領及注意事項

- ① 偏差連接器適用於氣壓缸。用於非氣缸時，請到本公司就近的營業單位諮詢。
- ② 偏差連接器的螺柱雖可旋轉調整，但不能做旋轉用途。
- ③ 本產品經分解後不能再使用。
- ④ 本產品已加入潤滑劑，不需再另外填充。
- ⑤ 氣缸活塞桿螺牙的鎖入深度，約於氣缸活塞桿的前端鎖入至底部時，向後旋轉1~2周的位置。
- ⑥ 安裝之前請不要讓灰塵、雜質等，進入連接器的內螺紋部。